



SENTRY VREL CONTROL VALVE

Pressure Conditioning

SAMPLE CONDITIONING

Chemical analysis of water and steam samples in modern power generation plants requires precise control of flow and pressure. However, high-pressure reduction needs can present sampling problems. The patented Sentry® VREL® is a valve specifically designed to solve unique high-pressure sampling issues.

The Sentry VREL consists of two stainless steel tubes joined to a large tube or barrel. A tapered rod assembly is inserted into precision holes in the barrel. The high pressure fluid enters, flows past one rod, turns and flows past the other rod, and then out. Pressure drop is a function of the length of the rods inserted into the barrel. The pressure is reduced smoothly under laminar flow conditions, minimizing dissociation of any components through discontinuous pressure drops. The rod position is controlled externally by turning the knob, and can be adjusted while sample is flowing. If blockage occurs, the rods can be retracted so system pressure can blow the solid matter through.

The Sentry VREL is the industry standard for samples greater than 500 psig (34.5 barg) according to the Annual Book of ASTM Standards, ASTM Designation D3370.

MODEL

VREL

BENEFITS

The Sentry VREL adjustable rod-in-tube design allows for variable pressure drop and flow control. Plus, unlike other valves, the VREL is cleanable in place without shut-down of the sample line. Since corrosion products, scale and other foreign matter often find their way into sample lines, plugging of the pressure reduction valve is common, and the sample line must be shut down while the valve is removed for cleaning or replacement. However, if the Sentry VREL plugs with solids, the rods can be fully retracted and the obstruction blown free without disconnecting any lines. The analyzer can be returned to service in minutes.

Both of these design advantages provide consistent sample conditioning.

And, when source pressures change, such as at startup and shutdown, the Sentry VREL can be easily adjusted to allow continuous monitoring under all pressure conditions.

FEATURES

- Ergonomic speed handle substantially reduces turning effort
- No valve/regulator erosion or wire drawing
- Fine flow control
- Fully retractable rods assure easy online purging
- Extended-body design eliminates possibility of bent tubes
- Flows from 150 milliliters per minute up to 4 liters per minute at pressure drops up to 5000 psig (345 barg) standard, and 7803 psig (538 bar) for supercritical power plant applications

Manufactured under one or more U. S. patents: RE37,153



DASTEC S.R.L.

Representantes / Distribuidores Exclusivos

Buenos Aires, Argentina

Tel.: (54 - 11) 5352-2500

Email: info@dastecsrl.com.ar


Web: www.dastecsrl.com.ar



Sample. Monitor. Measure.

SENTRY

Any Application. Anywhere.

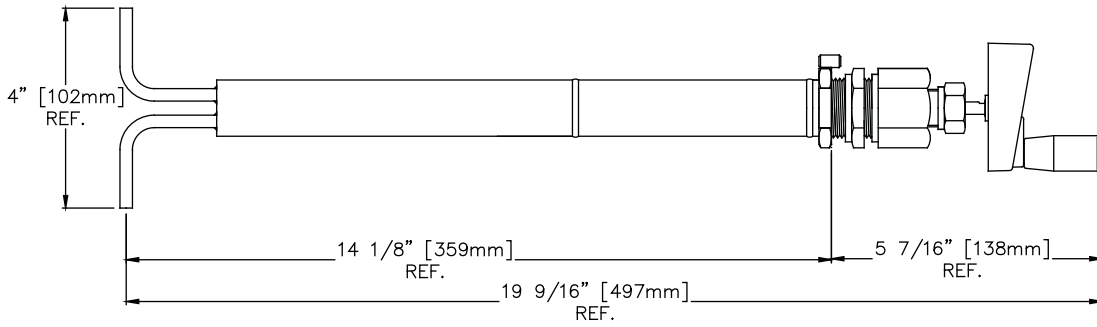

SPECIFICATIONS

pressure rating	5000 psig at 300°F (345 barg at 149°C)
standard end connection	1/4 in. (6.4 mm.) O.D. bare tube ends; other options available
wetted materials	316 SS
shipping weight	4 lb. (2 kg.)

NOTE: The Sentry VREL is not a shut-off valve. The minimum flow that can be obtained is approximately 150 cc per minute.



Representantes / Distribuidores Exclusivos

Buenos Aires, Argentina
 Tel.: (54 - 11) 5352-2500
 Email: info@dastecsr.com.ar
 Web: www.dastecsr.com.ar

sentry-equip.com

966 Blue Ribbon Circle North, Oconomowoc, WI 53066 U.S.A. | +1-262-567-7256 | sales@sentry-equip.com

© 2015 Sentry Equipment Corp. All rights reserved. All product and company names are property of their respective owners. It is solely the responsibility of end users, through their own testing and analysis, to select products and materials suitable for their specific application requirements, ensure they are properly installed, safely applied and properly maintained, and to limit their use to their intended purpose. Improper selection, installation or use may result in personal injury or property damage.

S-SW-SPS-00122-19 3-16



COMPANY WITH
 QUALITY SYSTEM
 CERTIFIED BY DNV GL
 = ISO 9001 =