

PTLST-20-LT

A Portable Telescopic, Laser Sight Thermometer
 for general purpose, dull surface applications



FEATURES

- Temperature ranges from 32 - 2372°F (0 - 1300°C)
- High optical resolution up to 120:1
- Precise aiming with dual laser and scope sighting
- Adjustable emissivity from 0.100 - 1.000
- For electrical preventative maintenance - paper, aggregate, organic powders, wood, rubber, food, glass, etc.
- MAX/MIN function and audible and visible HIGH-/LOW-alarm
- USB interface, PSC Connect Software
- Data logger for 2000 measured values

General specifications	
Ambient temperature	32 - 122°F (0 - 50°C)
Storage Temperature	- 4 - 140°F (-20 - 60°C)
Relative Humidity	10 - 95%, non-condensing
Size	10.3 x 8 x 2.36 in/264 x 203.5 x 60 mm
Weight	2.2 lbs/1000 g
Electrical specifications	
Outputs/digital	USB Interface
Power	Ni-MH rechargeable battery
BatteryLifeTime	5 hr laser and backlight or 25 hr w/o laser and backlight
Charge	Battery charger
Adapter	110VAC to 240VAC (50/60Hz)

Measurement specifications	
Temperature range	32 - 2372°F (0 - 1300°C)
Optical resolution	120:1
System accuracy	±1% of reading ±2°C
Repeatability	±0.5% of reading ±1°C
Response time	300 ms
Emissivity (adjustable)	0.100 - 1.000
Sighting	Dual lasers
Sighting scope	All models
Signal processing	MAX/MIN, Scan/Hold function
Alarm functions	Audible and visible HIGH/LOW
Data storage	2000 values
LCD-Backlight	Three color alarm notification Green - normal operation Blue - low set point Red - high set point


PTLST-20-LT

Technical data	PTLST-20-LT
Temperature range	32 - 2372°F (0 - 1300°C)
System accuracy	±1% of reading ±2°C
Repeatability	±0.5% of reading ±1°C
FOV (Field of View)	120:1
Response time (95%)	300 ms
Spectral range	8-14 μ
Emissivity	adjustable: 0.100 to 1.000
Alarm	•
Laser	dual laser
Focus	1" spot @ 8 ft / 4" spot @ 39 ft
Sighting Scope	•
Outputs / digital	USB interface
MAX/MIN/HOLD	•
Data Logger	2000 values
Software	PSC Connect Software
Battery Charger	•
Ni-MH battery	•
Carrying case	•
Tripod mount	1/4 inch - 20 UNC

- Standard accessories


Optical specifications

PTLST-20-LT

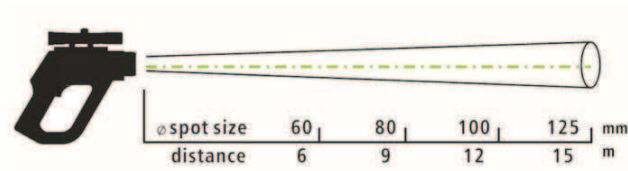

D:S = 120:1

PSC Connect Report Software

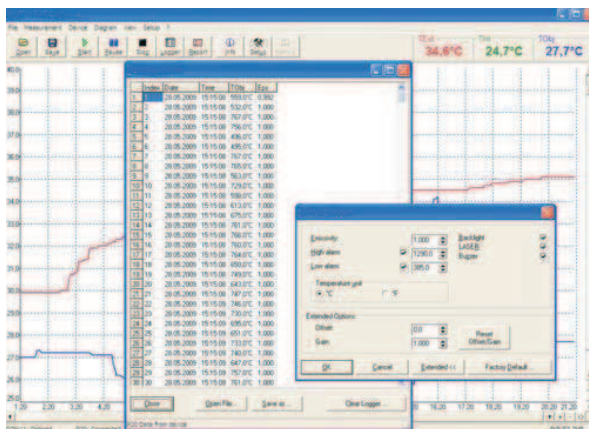

- Setup of parameters
- Download of logger data
- Display and record of temperature trends
- Image based report function

DASTEC S.R.L.

Representantes / Distribuidores Exclusivos

Buenos Aires, Argentina

Tel.: (54 - 11) 5352-2500

Email: info@dastecsr.com.ar

Web: www.dastecsr.com.ar

787 Susquehanna Avenue
Franklin Lakes, NJ 07417
PH: 201-485-8773
FX: 201-485-8110

PROCESS SENSORS CORPORATION
www.processsensorsIR.com
irtemp@processsensors.com

113 Cedar Street, S-1
Milford, MA 01757
PH: 508-473-9901
FX: 508-473-0715