



Gas



Liquid &amp; Slurry



Solid &amp; Powder



Steam &amp; Water

# SENTRY GA SAMPLER

## Cross-Cut Samplers

### AUTOMATIC SAMPLING

The Sentry® GA automatic cross-cut sampler automates sampling of dry free-flowing materials such as grain, granules, powders, flakes or pellets in vertical or inclined chutes. A cross-cut sampler captures a cross section of an entire material stream and is used in situations where material segregation exists.

To obtain a sample, the Sentry GA sampler's air-actuated pelican type head moves across the process flow in the chute and deposits it at the discharge. The material sampled is discharged through a flexible hose to a collection point. Material characteristics are not affected by the sampler because no moving parts convey the material to the sample container. Sample volume can be changed at the sampler controller.

#### MODELS


GA | GE | GH

#### BENEFITS

With representative sampling, characteristics of each sample match that of the entire lot or batch – so samples are repeatable, leading to accurate sample analysis data. Automatic sampling ensures a sample can be easily and safely obtained with no need for direct human interface or interference. This ensures sample integrity as well as operator safety.

#### FEATURES

- Customized to meet various application needs
- Wetted components are 300 series stainless steel
- White nitrile seals or gaskets
- USDA, Canadian, FGIS and NOPA approved
- Square or round gravity chutes; 2 or 3-inch diameter (51 or 76 mm) discharge tube
- Designed to eliminate the degradation of sample material
- No moving parts in conveyance from sampler to container, keeping material characteristics consistent
- CE and ATEX compliant models available
- Pneumatic, electric or hydraulic actuation for flexibility
- Includes air filter, regulator and gauge where applicable
- Adjustable pelican opening available
- Optional wear lining in lower transition
- Optional release coating to ensure a non-stick surface
- QPQ hardening on contact surfaces available to protect against wear and abrasion
- Explosion proof (XP) motor available
- Pre-plumbed filter/regulator and solenoid valve available

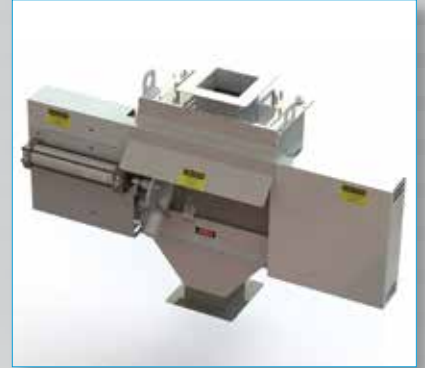

# DASTEC S.R.L.

**Representantes / Distribuidores Exclusivos**

Buenos Aires, Argentina

Tel.: (54 - 11) 5352-2500

Email: [info@dastecsrl.com.ar](mailto:info@dastecsrl.com.ar)


Web: [www.dastecsrl.com.ar](http://www.dastecsrl.com.ar)



Sample. Monitor. Measure.

# SENTRY

Any Application. Anywhere.

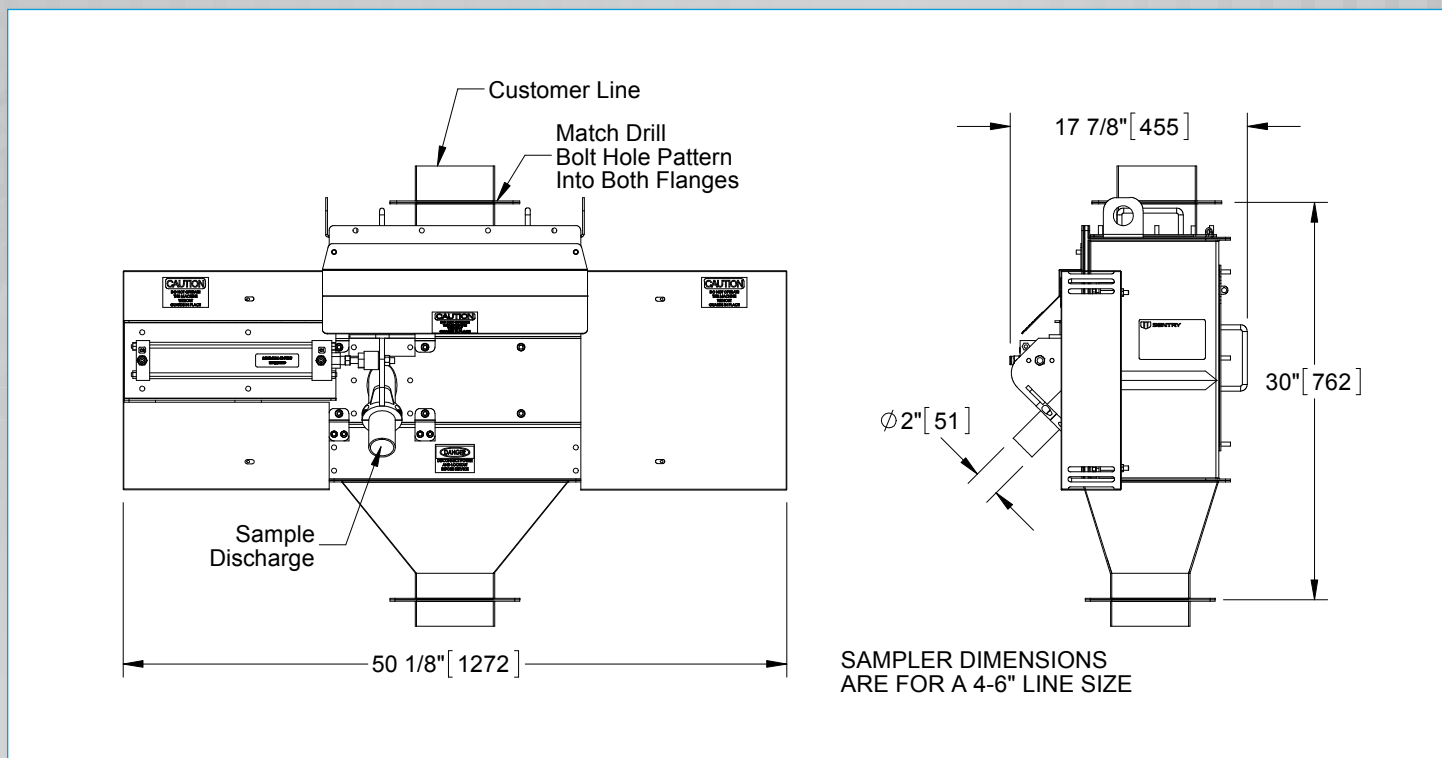

SPECIFICATIONS	
materials	300 series stainless steel, white nitrile, UHMW-PE, aluminum cylinder
particle size	10 µm to 1/4 in (6 mm); larger sizes upon request
temperature rating	-10 to 180°F (-23 to 82°C)
air requirements	air pressure of 60 to 80 psi (4.1 to 5.5 bar) recommended; air usage 524 cc per inch of stroke
suggested connection to sample discharge	flexible tubing to a collection container or indexing cabinet
inlet size	4 to 36 in (10 to 91 cm) square or round
recommended sampler location	vertical or inclined spouts
quantity of sample	determined by flow rate and aperture size
collection containers	PET jar, 304 stainless steel jar
pressure rating	ATM
shipping weight	consult Sentry Equipment

# DASTEC S.R.L.

## Representantes / Distribuidores Exclusivos

Buenos Aires, Argentina  
 Tel.: (54 - 11) 5352-2500  
 Email: info@dastecsrl.com.ar  
 Web: www.dastecsrl.com.ar

[sentry-equip.com](http://sentry-equip.com)

966 Blue Ribbon Circle North, Oconomowoc, WI 53066 U.S.A. | +1-262-567-7256 | sales@sentry-equip.com

© 2016 Sentry Equipment Corp. All rights reserved. All product and company names are property of their respective owners. It is solely the responsibility of end users, through their own testing and analysis, to select products and materials suitable for their specific application requirements, ensure they are properly installed, safely applied and properly maintained, and to limit their use to their intended purpose. Improper selection, installation or use may result in personal injury or property damage.

S-SP-SPS-00169-4 6-16



COMPANY WITH  
 QUALITY SYSTEM  
 CERTIFIED BY DNV GL  
 = ISO 9001 =