ST110 Mass Flow Meter with VeriCal FLUID COMPONENTS INTERNATIONAL LLC



Thermal Dispersion Air/Gas Insertion Flow Meter






The Model ST110 flow meter combines a broad selection of insertion-type flow elements with best-in-class transmitter/electronics, superior calibration and FCI's exclusive patented VeriCal system. VeriCal provides you with the ability to perform periodic field validation and verification of the flow meter's measuring performance and calibration without extracting the flow meter from the pipe or process.

Flow Element and Process Connections

- All welded construction
- 316L stainless steel or Hastelloy-C276
- Fast response and extra-rugged duty choices
- Variable (adjustable) and fixed insertion depths
- NPT, flanges, hot-tap retractable packing gland connections

Transmitter and Electronics

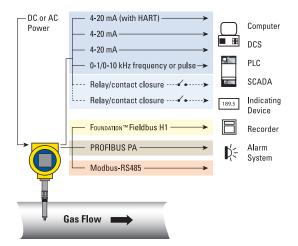

Model ST110 Features

- Validate Performance On-Site in Minutes
- Save Costs, No Need to Remove Flow Meter from Process
- Comply with ISO and Local Regulations for Periodic **Calibration Verification**
- Compatible with More than 200 Gases
- **Direct Mass Flow Measurement**
- **Dual Function Flow and Temperature**
- Temperature Service to 500 °F [260 °C]
- No Moving Parts, Non-Clogging
- **Easy, Low Cost Single Point Insertion**
- Best-In-Class Digital/Graphical Readout
- **Multiple Analog Outputs**
- **Extensive Bus Communications Options**
- **Agency Approvals on Full Instrument**
- **Provides In-Situ Flow Element Cleaning**
- **On-Board Data Logger**
 - All metal enclosure
 - Four (4) conduit ports
 - 2" x 2" [50 mm x 50 mm] backlighted LCD readout/display
 - Flow, total flow and temperature
 - Triple analog outputs with HART
 - FOUNDATION™ fieldbus, PROFIBUS PA, Modbus options
 - Dual relays/alarms option
 - Integral or remote mounting (up to 1000')
 - AC or DC power
 - FM, FMc, ATEX and IECEx approvals for Division 1, Zone 1 hazardous
 - Standard and extended range temperature compensation
 - Data logging to removable micro-SD card

Calibration


- Calibrated to your installation conditions and gas specifications on one of 18 precision, NIST traceable flow stands
- Up to five (5) unique calibrations stored onboard
- SpectraCal[™] 10 user selectable / changeable gases



Representantes / Distribuidores Exclusivos

Buenos Aires, Argentina Tel.: (54 - 11) 5352-2500 Email: info@dastecsrl.com.ar Web: www.dastecsrl.com.ar

Model ST110 Features

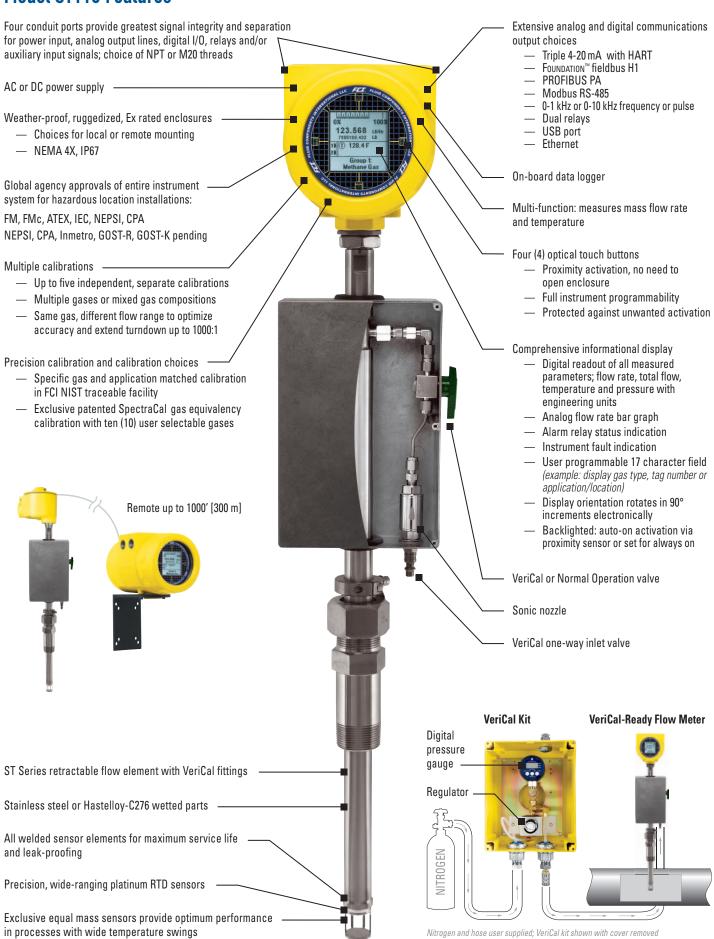

Model ST110 Single-Point Insertion Mass Flow Meter Specifications

Instrument

- Measuring Capability: Flow rate, total flow and temperature
- Basic Style: Insertion, single element with VeriCal™ capability
- Flow Measurement Range: 0.25 SFPS to 600 SFPS [0,07 NMPS to 172 NMPS]

 Air at standard conditions; 70 °F and 14.7 psia [0 °C and 1013,25 bar(a)]
- Temperature Measurement Range: Up to 500 °F [260 °C] commensurate with element; see operating temperature in flow element specification
- **Media:** All gases that are compatible with the flow element material

Accuracy

Flow:

Gas Specific Calibration: ±0.75% reading, ±0.5% full scale

SpectraCal[™] Gas Equivalency: Typically $\pm 4\%$ reading, $\pm 0.5\%$ full scale; gas conditions specific to application will determine accuracy; utilize FCl's online tool, AVAL, to evaluate your application and provide expected accuracy

Temperature: ±2 °F [±1,1 °C] (display only, flow rate must be greater than 5 AFPS [1,5 m/sec])

Repeatability

Flow: ±0.5% reading

Temperature: $\pm 1 \,^{\circ}\text{F} \, [\pm 1 \,^{\circ}\text{C}]$ (flow rate must be greater than 5 AFPS)

Temperature Coefficient

With optional temperature compensation; valid from 10% to 100% of full scale calibration

Flow: Maximum ±0.015% of reading / °F up to 500 °F

[±0.03% of reading / °C up to 260 °C]

Turndown Ratio

Standard: Factory set and field adjustable from 10:1 to 100:1 within calibrated flow range

Temperature Compensation

Standard: $\pm 30 \,^{\circ}\text{F} \, [\pm 16 \,^{\circ}\text{C}]$ Optional: $\pm 100 \,^{\circ}\text{F} \, [\pm 55 \,^{\circ}\text{C}]$

Agency Approvals

FM, FMc (Canadian): Class I, Division 1, Hazardous Locations;

Groups B,C,D,E,F,G

ATEX and IECEx: Zone 1, II 2 GD Ex d IIC T4 NEPSI, CPA, Inmetro, GOST-R, GOST-K pending

■ Calibration: Performed on NIST traceable equipment

Flow Element

Material of Construction

All-welded 316L stainless steel; Hastelloy-C optional

Operating Pressure

Fixed Connection NPT: 1000 psig [69 bar (g)] **Fixed Connection Flanged:** per flange rating

Operating Temperature (Process)

-40 °F to 350 °F [-40 °C to 177 °C] -40 °F to 500 °F [-40 °C to 260 °C]

Process Connection

Retractable Packing Glands

Low pressure 50 psig [3,5 bar(g)]) or medium pressure (500 psig [34 bar(g)]) with graphite or Teflon packing material; 1 1/4" male NPT or ANSI or DIN flange Teflon packing required when process media is ozone, chlorine or bromine

Fixed Fittings: 1" male NPT or ANSI or DIN flange

Insertion Length: Field adjustable lengths

1" to 6" [25 mm to 152 mm]

1" to 12" [25 mm to 305 mm]

1" to 21" [25 mm to 533 mm]

1" to 60" [25 mm to 1524 mm]

Fixed lengths from 2.6" to 60" [66 mm to 1524 mm]

 Remote Transmitter Configurations: Transmitter may be mounted remotely from flow element using interconnecting cable (up to 1000' [300 m])

Flow Transmitter/Electronics

• Operating Temperature: 0 °F to 150 °F [-18 ° to 65 °C]

Innut Power

AC: 85 Vac to 265 Vac **DC**: 24 Vdc ± 20%

Outputs Analog

Standard: Three (3) 4-20 mA*, 0-1kHz, or 0-10 kHz pulse/frequency

4-20 mA outputs are user assignable to flow rate, temperature and/or if so equipped, pressure; outputs are user programmable to full flow range or subsets of full flow range; pulse/frequency output is user selectable as pulse for external counter/flow totalizer, or as 0-1 kHz or 0-10 kHz frequency representing flow rate

* Outputs are isolated and have fault indication per NAMUR NE43 guidelines, user selectable for high (>21.0 mA) or low (<3.6 mA)

Optional: Standard output plus two (2) 2A SPDT relays

Relays independently user assignable to flow, temperature or pressure; user programmable for hi/lo trip, hysteresis from 00.0 to 99.9 counts and time delay from 00.0 to 99.9 seconds

Digital

Standard: USB. Ethernet

Optional: HART (comes standard with analog outputs, V7 compliant)
FOUNDATION™ fieldbus H1, PROFIBUS PA or Modbus RS-485

Auxiliary Inputs

Two 4-20 mA input channels; used for FCI administered special configurations to allow ST110 series to accept outputs from external devices such as gas analyzers, gas composition or pressure sensors

Enclosures

Main Transmitter/Electronics:

NEMA 4X, IP67; polyester powder coated aluminum; 1 conduit port threaded as 1 " NPT or M20x1.5; 5.40 " x 4.82 " [137.2 mm x 122 mm]

Local Enclosure (Remote Configuration):

NEMA 4X, IP67; polyester coated aluminum; 1 conduit port threaded as 1 " NPT or M20x1.5; 5.40 " x 4.82 " [137.2 mm x 122 mm]

Data Logger

User programmable for readings per time increment to a maximum of 1 reading/ second; removable, circuit board-mountable 2GB micro-SD (secure digital) memory card supplied; stores approximately 21M readings in ASCII comma-separated format

Readout/Display and Optical Touch Buttons (Optional):

- Large 2" x 2" [50 mm x 50 mm] LCD; digital plus bar graph and engineering units
- Digital displays of flow rate, total flow, temperature and pressure (with STP models); user selectable for engineering units
- Analog bar graph of flow rate
- Relay/alarm status indication
- User programmable 17 alphanumeric character field associated with each calibration group
- Set-Up & Service mode displays text and service codes
- Backlighted backlight activated by proximity motion detection, or user may set for always on
- Four (4) optical touch buttons for user programming of instrument set-up and service interrogation
- Optical touch button activation through front window no need to open enclosure to access or activate
- Display is electronically rotatable in 90° increments to optimize viewing angle


Note: If readout/display not ordered, all user set-up and service interrogation must be done via computer link to bus comm and/or USB port.


Specifications at reference operating conditions of 70 °F, 14.7 psia [21.1 °C, 1.013bar (a)] and straight pipe run 20d upstream, 10d downstream

FCI is a continuous improvement company; specifications subject to change without notice

Model ST110 Single-Point Insertion Mass Flow Meter


Integral Configuration

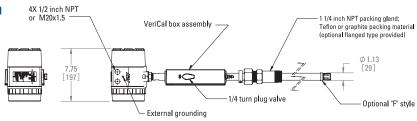

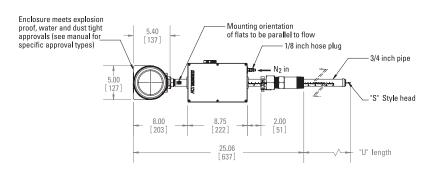



Remote Transmitter

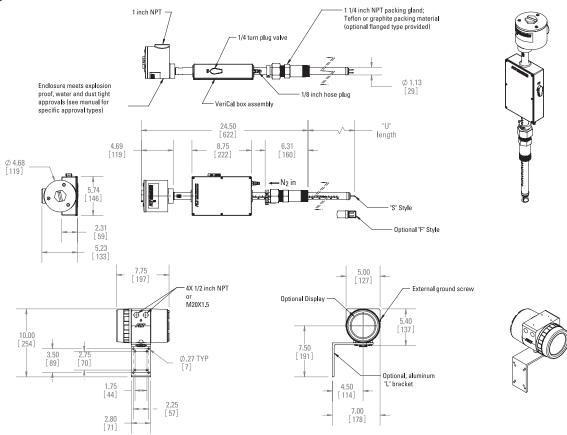

FLUID COMPONENTS INTERNATIONAL LLC

Locally Represented By:

DASTEC S.R.L.

Tel: (+54 11) 5352 2500 Email: info@dastecsrl.com.ar

Uruguay www.dastecsrl.com.uy

= Paraguay www.dastecsrl.com.pg

Bolivia www.tecdas.com.bo

Visit FCI online at www.FluidComponents.com | FCI is ISO 9001:2000 and AS9100 Certified

FCI World Headquarters

1755 La Costa Meadows Drive | San Marcos, California 92078 USA | Phone: 760-744-6950 Toll Free (US): 800-854-1993 Fax: 760-736-6250

FCI Europe

Persephonestraat 3-01 | 5047 TT Tilburg, The Netherlands | **Phone:** 31-13-5159989 **Fax:** 31-13-5799036

FCI Measurement and Control Technology (Beijing) Co., LTD | www.fluidcomponents.cn

Room 107, Xianfeng Building II, No.7 Kaituo Road, Shangdi IT Industry Base, Haidian District | Beijing 100085, P. R. China Phone: 86-10-82782381 Fax: 86-10-58851152

Doc. No. 02MK011478- Page 4 of 4