Orbisphere K1100 Luminescent Dissolved Oxygen Sensor

ApplicationsPower (non-nuclear)



410 Monochannel System (O₂)



510 Multichannel System (O₂)

The first maintenance-free optical oxygen sensor for power plants.

The Orbisphere K1100 optical sensor, together with the Orbisphere 410 single channel controller and the Orbisphere 510 multichannel controller, offers a new way of monitoring oxygen in power plants. Orbisphere sensors set the industry standards for oxygen measurement by offering peace of mind to every water chemist.

One calibration per year

One zero point calibration per year is all that is needed with the K1100 sensor. Designed for minimal drift, luminescent technology makes the K1100 sensor the most stable sensor with the longest calibration interval in the industry.

No membranes = two minutes of maintenance

With no membranes to replace and no electrolyte solution to replenish, the K1100 requires only two minutes of maintenance per year. Corrosive or hazardous chemicals are not required, making the annual task faster, easier and safer without reducing measurement precision.



Representantes / Distribuidores Autorizados

Argentina Tel: (+54 11) 5352 2500 Email: info@dastecsrl.com.ar Web: www.dastecsrl.com.ar

Uruguay www.dastecsrl.com.uy

Low cost retrofit

The complete system consists of a controller, a flow chamber, and the K1100 Luminescent Dissolved Oxygen sensor. The sensor is compatible with Hach Orbisphere 28 mm flow chambers, eliminating the need for engineering changes. Installation is fast and easy and does not require special preparation.

A new level of confidence

The K1100 optical sensor is the first to use luminescent measurement technology to measure both ppb and ppm oxygen levels in power plants. Since 1978, Hach Orbisphere sensors have set the industry standard for oxygen measurement by delivering confidence to every water chemistry manager. The K1100 maintains this tradition and offers significant operating and cost benefits.



Wall (pipe) mount: stainless steel

Wall (pipe) mount: IP65, NEMA 4x

ETL, conforming to UL 61010-1 and

3 measurement alarm relays (2A to 30 VAC or 0.5 A to 50 VDC); configurable to send diagnostics information

Color TFT touch-screen display

3 smart 0/4-20 mA (500 ohms), programmable as linear or tri-liniear, configurable to send diagnostics

Panel mount: aluminum

EMC: EN61326-1:2006

CE: EN61010-1:2010

CSA 22.2 No. 61010-1

1 system alarm relay

information

Panel mount: IP65

Orbisphere Controller

Enclosure

Construction

Compliance

Display

Relays

. Certifications

Analog Outputs

Enclosure Rating

Technical Data*

K1100 (Low Level Sensor)

Range Temperature Range	0 - 2000 ppb dissolved O ₂ (DO) (indicative values up to 5000 ppb) Accurate from -5 - 50 °C
	Resistant to temperature from -5 - 100 °C
Repeatability	\pm 0.4 ppb or 1 % whichever is greater
Reproducibility	\pm 0.8 ppb or 2 % whichever is greater
Accuracy	\pm 0.8 ppb or 2 % whichever is greater
Lower Limit of Detection (LOD)	0.6 ppb
Response Time	(90%) <10 s (gas phase); <30 s (liquid phase)
Display Resolution	0.1 ppb
Calibration	Single point zero calibration with standard 99.999% nitrogen (quality 50) or equivalent oxygen free gas
Sample Pressure	1 - 20 bar absolute (14.5 - 290 psia)

K1100 (High Level Sensor)

K1100 (High Level Sensor)			(2 A to 30 VAC or 0.5 A to 50 VDC)
Range	0 - 40 ppm dissolved O ₂ (DO)	Communication	RS485
Temperature Range	Accurate from -5 - 50 °C (23 - 122 °F)		Profibus DP (optional)
	Resistant - temperature from		Ethernet
	-5 - 100 °C (23 - 212 °F)		USB-client to download data
Repeatability	± 0.015 ppm or 2 % whichever is greater		from a computer USB-host to download data
Reproducibility	± 0.02 ppm or 3 %		with a USB memory stick
Accuracy	whichever is greater ± 0.02 ppm or 3 % whichever is greater	Data Storage	Rolling buffer or store once mode for up to 1000 measurements and 1000 operator actions
Lower Limit of Detection (LOD)	0.015 ppm		Holds calibration records for last 50 calibrations
Response Time	(90%) <10 s (gas phase); <50 s (liquid phase)	User Interface	Touch-screen panel displays: concentration, trend graph,
Display Resolution	0.1 ppb		diagnostics, alarm status,
Calibration	Two points at cap replacement		historical data
Sample Pressure	(zero and air), one during use (air) 1 - 20 bar absolute (14.5 - 290 psia)	Dimensions (H x W x D)	Wall dimensions: 230.5 mm x 250 mm x 160 mm (9.1 in x 9.8 in x 6.3 in)
			Panel dimensions: 156 mm x 220 mm x 253.5 mm (6.14 in x 8.86 in x 9.84 in)
		Power	Universal 100/240 VAC


Universal 100/240 VAC @ 50/60 Hz, 25 VA

10-36 VDC, 25 W

*Subject to change without notice.


Dimensions


In millimeters.

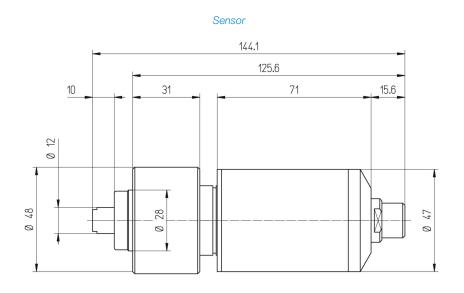

Controller (Wall / Pipe Mount)



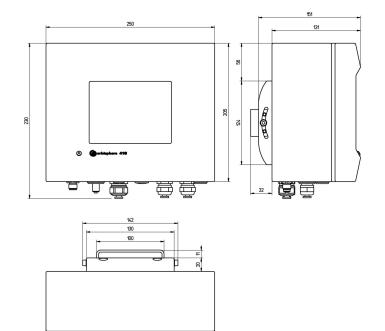

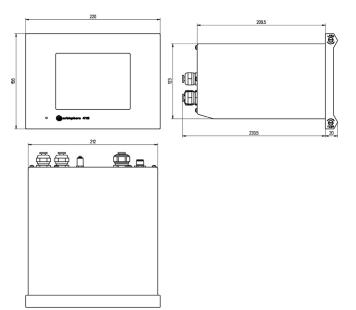

Order Information

Pre-configured Systems

K1100-KTO-W-IMP	Kit containing sensor K1100-S00, controller 410K/W1C0000, 3 m cable (32510.03), ¼" flow chamber (32001.011)
K1100-KTO-W-MET	Kit containing sensor K1100-S00, controller 410K/W1C0000, 3 m cable (32510.03), 6 mm flow chamber (32001.010)
K1100-KTO-P-MET	Kit containing sensor K1100-S00, controller 410K/P1C00000, 3 m cable (32510.03), 6 mm flow chamber (32001.010)
K110H-KTO-W-IMP	Kit containing sensor K1100-S00H, controller 410K/W1C0000, 3 m cable (32510.03), 1/4" flow chamber (32001.011)
K110H-KTO-P-IMP	Kit containing sensor K1100-S00H, controller 410K/P1C00000, 3 m cable (32510.03), ¼" flow chamber (32001.011)
K110H-KTO-P-MET	Kit containing sensor K1100-S00H, controller 410K/P1C00000, 3 m cable (32510.03), 6 mm flow chamber (32001.010)
DGK510KK-W1025	Kit containing 1x dual-channel controller 510KK0/W1C00000, 2x sensor K1100-S00, 2x 5 m cable (32510.05), 2x 6 mm flow chamber (32001.010)
DGK510KK-P1025	Kit containing 1x dual-channel controller 510KK0/P1C00000, 2x sensor K1100-S00, 2x 5 m cable (32510.05), 2x 6 mm flow chamber (32001.010)
DGK510KK-W-IMP	Kit containing 1x dual-channel controller 510KK0/W1C00000, 2x sensor K1100-S00, 2x 10 m cable (32510.10), 2x ¼" flow chamber (32001.011)
DGK510KK-P-IMP	Kit containing 1x dual-channel controller 510KK0/P1C00000, 2x sensor K1100-S00, 2x 10 m cable (32510.10), 2x ¼" flow chamber (32001.011)
DGK510KKK-W-IMP	Kit containing 1x multi-channel controller 510KKK/W1C00000, 3x sensor K1100-S00, 3x 10 m cable (32510.10), 3x ¼" flow chamber (32001.011)
DGK510KKK-P-IMP	Kit containing 1x multi-channel controller 510KKK/P1C00000, 3x sensor K1100-S00, 3x 10 m cable (32510.10), 3x ¼" flow chamber (32001.011)

Controllers and Sensors

410K/W1C00000	Hach Orbisphere 410 controller (wall mount)
410K/P1C00000	Hach Orbisphere 410 controller (panel mount)
510KK0/P1C00000	Hach Orbisphere 510 dual-channel controller (panel mount)
510KK0/W1C00000	Hach Orbisphere 510 dual-channel controller (wall mount)
510KKK/W1C00000	Hach Orbisphere 510 multi-channel controller (wall mount)
K1100-S00	Luminescent dissolved oxygen sensor for in-line applications, 0 - 2000 ppb, with 28 mm Orbisphere fitting
K1100-S00H	Luminescent dissolved oxygen sensor for in-line applications, 0 - 40 ppm, with 28 mm Orbisphere fitting

Accessories

K1100-L	Replacement luminescent spot for low range sensors (0 - 2000 ppb)
К1100-Н	Replacement luminescent spot for high range sensors (0 - 40 ppm)
32510.05	Sensor cable to connect M/K-type sensors, 5 m (16.4 ft.)
32001.011	Flow chamber in stainless steel (316) with 1/4" fittings. Supplied with EPDM O-rings.
32001.010	Flow chamber in stainless steel (316) with 6 mm fittings. Supplied with EPDM O-rings.

Hach World Headquarters: Loveland, Colorado USA

United States:
Outside United States:
hach.com

800-227-4224 tel







Representantes / Distribuidores Autorizados

💶 Argentina Tel: (+54 11) 5352 2500 Email: info@dastecsrl.com.ar Web: www.dastecsrl.com.ar

Uruguay www.dastecsrl.com.uy

